


This guide will show you how to remove and replace the back casing for the Connect Four Electronic Handheld.

Written By: Wil

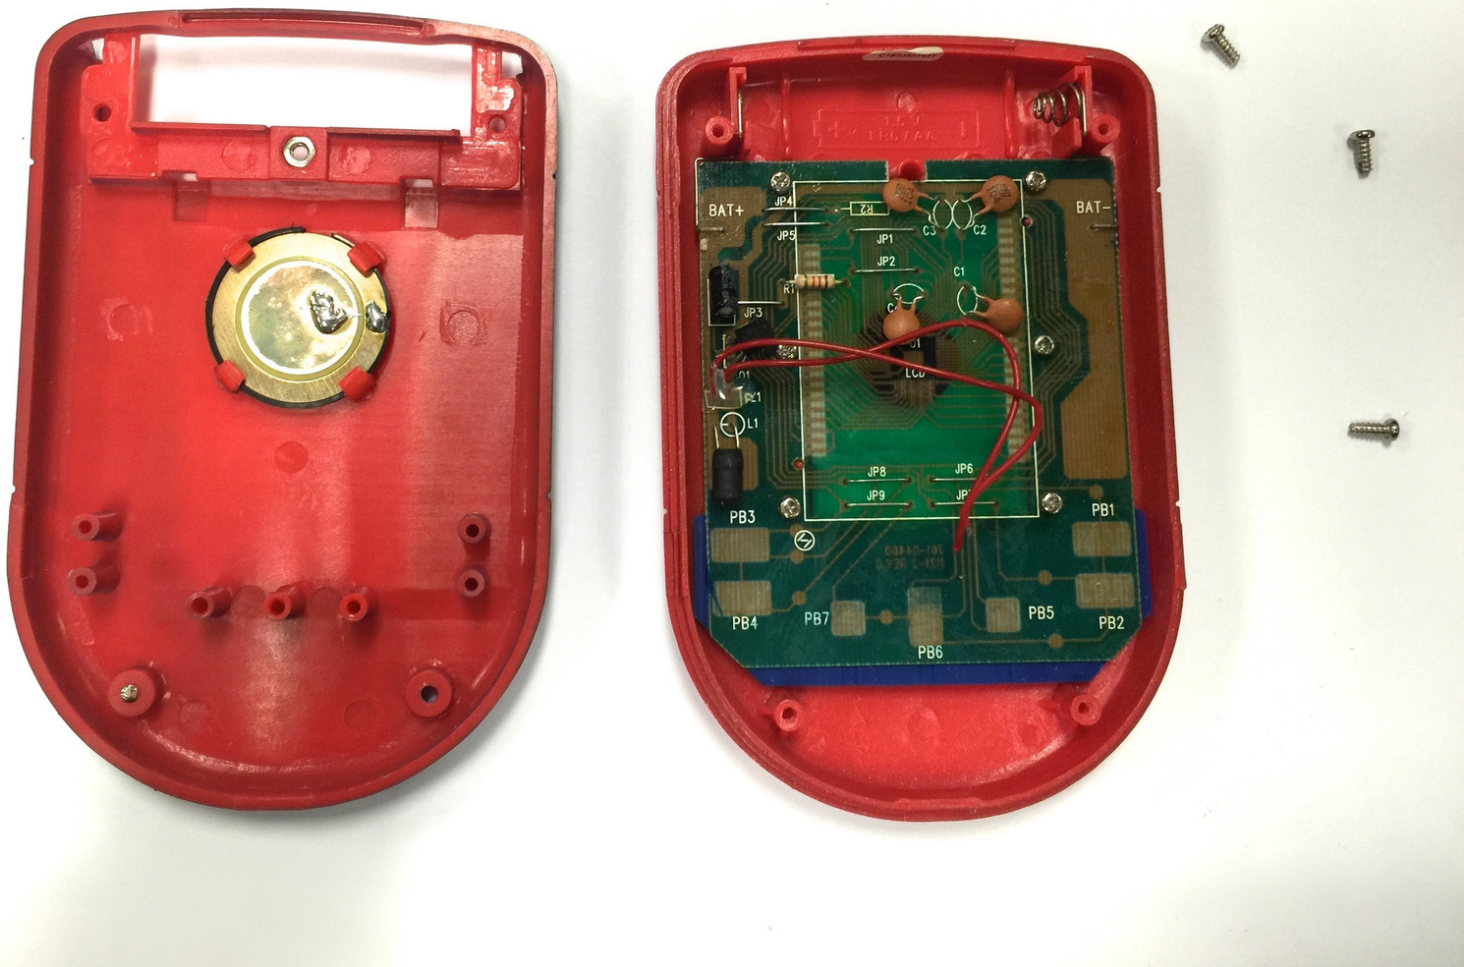

## INTRODUCTION

To access any of the internal components of the Connect Four Electronic Handheld, you will need to remove the back casing.

---



### TOOLS:

- [Small Phillips Head Screwdriver](#) (1)
-

## Step 1 — Ensure the device is off.



- Make sure the Connect Four Electronic Handheld is off. There is no off button, so you will need to let it shut off automatically.


## Step 2 — Removing the battery casing.



- Take a Phillips head screwdriver and remove the (9.1mm length) #2 screw in the middle of the battery casing.
- Slide the cover off and remove the battery.



## Step 3 — Removing/Replacing the Back Casing

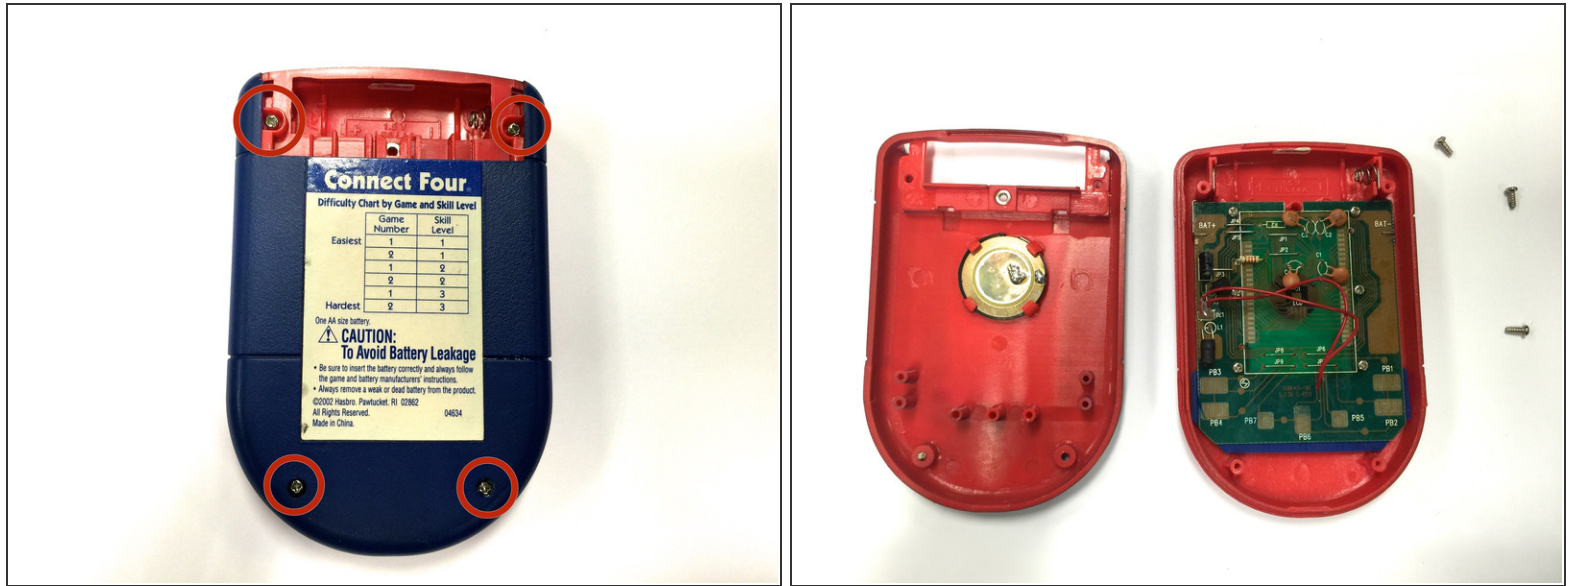

- Using a Phillips head screwdriver, remove the four (7.1mm- length) #3 screws that hold the back casing in place.
  - Carefully remove the back casing.
- ⚠ When removing the back casing, make sure not to rupture the wires that connect the speaker to the circuit board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-03 11:48:29 PM.